



 




Installation Instructions

## **BOROUX**

**Stainless Steel Spigot** 





Scan here for a detailed visual guide and join us for a tailored journey into water wellness and personalized support.



This model BX-SS-SPIGOT-XX is certified by IAPMO R&T to NSF/ANSI/CAN 61 and 372. NSF/ANSI/CAN 61: Q≤0.5

## To attach the spigot:

- Pour any remaining water out of the upper and lower chambers and remove the existing spigot.
- Remove the wingnut, the two stainless steel washers, and the two silicone washers from the spigot body.
- Thread one stainless steel washer onto the spigot, positioning it so that the beveled edge faces away from the lower chamber, as shown in Figure 1.
  - If you ordered a black or white painted spigot, thread the black or white painted washer onto the spigot as noted above.
- Thread a silicone washer onto the spigot.
  - If you ordered a black painted spigot, thread the black colored silicone washer onto the spigot.
- Insert the spigot through the hole in the lower chamber.
- Thread the remaining silicone and stainless steel washers onto the spigot inside the lower chamber, positioning it so that the beveled side of the metal washer faces away from the hole, as shown in Figure 1.
- Thread the wingnut onto the spigot, securing it in place.
- After tightening the wingnut, make sure the outside metal washer is not pinching the silicone base ring.
- Move the spigot handle to the closed position, as shown in Figure 2, with the handle at a 90-degree angle from the spigot body.

## What is included:

- 1. Stainless steel spigot
- 2. Two silicone washers
- 3. Two stainless steel washers
- 4. Wingnut

Figure 1

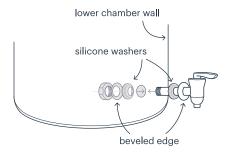


Figure 2

